

# Configure Dell 5110cn printer to retrieve IP address from bootp server

## Configure Dell 5110cn printer to retrieve IP address from bootp server

### Question

How do I manually configure my Dell 5110cn printer to retrieve its IP address from the bootp server?

### Answer

Use these steps to configure your Dell 5110cn printer to retrieve its IP address from the bootp server:

1. Standing at the printer, press the **menu** button.
2. Press the down arrow until you see **Admin** menu.
3. Press the **check** in the middle of the four arrows.
4. Press the **down arrow** until you see **Wired Network**.
5. Press the **check**.
6. Press the **down arrow** until you see **TCP/IP**.
7. Press the **check**.
8. Press the **down arrow** until you see **Get IPAddress**.
9. Press the **check**.
10. Press the **down arrow** until you see **BOOTP**.
11. Press the **check**.
12. Restart the printer for the settings to take effect.