

Configure Dell 5110cn printer to retrieve IP address from bootp server

Configure Dell 5110cn printer to retrieve IP address from bootp server

Question

How do I manually configure my Dell 5110cn printer to retrieve its IP address from the bootp server?

Answer

Use these steps to configure your Dell 5110cn printer to retrieve its IP address from the bootp server:

1. Standing at the printer, press the **menu** button.
2. Press the down arrow until you see **Admin** menu.
3. Press the **check** in the middle of the four arrows.
4. Press the **down arrow** until you see **Wired Network**.
5. Press the **check**.
6. Press the **down arrow** until you see **TCP/IP**.
7. Press the **check**.
8. Press the **down arrow** until you see **Get IPAddress**.
9. Press the **check**.
10. Press the **down arrow** until you see **BOOTP**.
11. Press the **check**.
12. Restart the printer for the settings to take effect.